
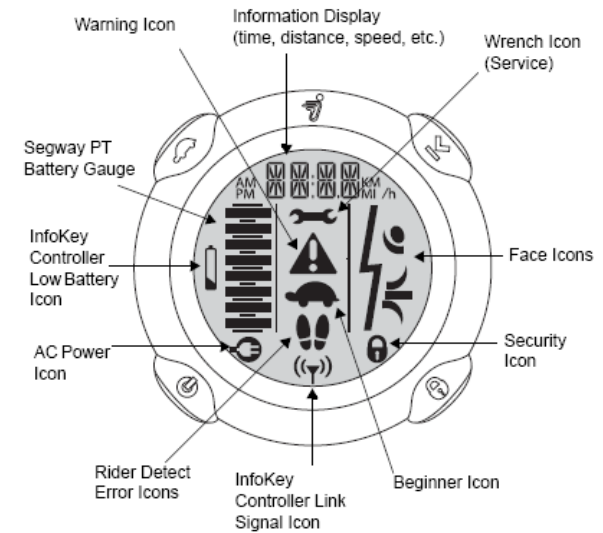


# Segway PT InfoKey Quick Reference Card

## Info Key Information

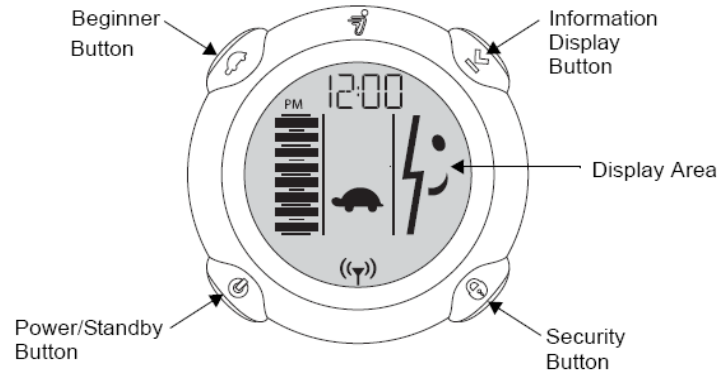

**Beginner Button-** allows switching from beginner mode (6 mph) to normal mode (12.5 mph), also allows illuminating the backlight.

**Power/Standby Button-** Allows you to power the Segway PT on and off. Also by tapping button, allows you to switch from Balance Mode to Standby Mode.

**Information Display Button-** Allows you to scroll through information including time, date, speed, average speed, trip distance, and odometer.

**Security Button-** Allows you to activate the security function (alarm).

Control	Description
<b>Icons/Controls on Display</b>	
Information Display 	Displays time, date, speed, average speed, trip distance and odometer.
Wrench icon 	Indicates a system fault on the Segway PT that requires service.
Face icons 	A series of face icons display to indicate status. For example, you may see a happy face, sad face, or neutral face.
Security icon 	Indicates the security function is activated.
Beginner icon 	A turtle indicates that the Beginner Setting is enabled (top speed and turning sensitivity are set at lower rates). When the Beginner icon is not displayed, the Beginner Setting has been disabled.
InfoKey Controller Link Signal icon 	Indicates the InfoKey Controller has detected the Segway PT. The InfoKey Controller must be within 15 ft. (5m) in order to communicate with your Segway PT.

Control	Description
Rider Detect Error icons 	If any two of the four Rider Detect Sensors (two located beneath each Mat) are not depressed while you are riding, the Rider Detect Error icons will be displayed. The Rider Detect Error icons display in Standby Mode if you attempt to step onto a Segway PT that is not ready to ride. Rider Detect Error icons display at startup if there is any weight on the Mats.
AC Power icon 	Indicates the Segway PT is plugged in to AC power.
InfoKey Controller Low Battery icon 	Indicates the InfoKey Controller battery must be replaced. Dispose of the battery properly in accordance with regulations governing disposal of toxic materials. CR2430 replacement batteries are available at electronics stores. A spare InfoKey Controller battery ships with your new Segway PT, stored beneath the Console Trim.
Segway PT Battery Gauge 	Indicates the amount of power remaining in the Segway PT Batteries.
Warning icon 	Indicates a warning condition caused by factors such as aggressive riding, system operating outside of temperature range, rider lifting foot off of Mat, etc.