## **Rider Customization Settings**

New wireless InfoKey™ controller software allows the Segway® PT rider to set his/her speed limit and Shutdown/Timeout settings. The following instructions describe how to access these new features using your InfoKey controller. Please make sure your Segway PT is powered-off when adjusting these settings.

## **Setting Speed Limits**

For information about the Speed Limiter, please consult your Reference Manual.



If the Segway PT pushes the Handlebar back, stop leaning forward and slow down. Always leave a gap between yourself and the Handlebar. Failure to slow down in response to the Speed Limiter could result in risk of death or serious injuries from falls.

For your first ride, the Segway PT is set to operate exclusively with the Beginner Setting enabled. If the Turtle icon does not display, do NOT ride the Segway PT until you enable the Beginner Setting. Use the Beginner Setting and ride in areas free of obstacles and distractions until you are comfortable on your Segway PT. All new riders should use the Beginner Setting. Do NOT let new riders operate the Segway PT outside of your direct supervision unless they have read the Getting Started Manual and watched the Safety Video and have a spotter to hold the Handlebar in accordance with the instructions in the Getting Started Manual.

To modify the Speed Limits and Shutdown Timeout, the rider must first (while the Segway PT is not powered on) press the Information Display button (\*\*) until the odometer is displayed. Then, hold the Information Display button for about two seconds, until the display message at right is shown.

The display will alternate between the current speed setting (Beginner Setting speed limit), and the display at right.



Pressing the Security button  $(oldsymbol{ heta})$  will display the next available speed. The Beginner Setting

speed limit options range from 4.0 mph to 8.0 mph in increments of 0.5 mph.


Once your preferred speed is displayed, press the Information Display button ( $\stackrel{\checkmark}{\Sigma}$ ) again to save the Beginner Setting speed. The InfoKey controller should display the information shown at right.

The display will alternate between the current speed setting (Standard Setting speed limit) and the above display.

Pressing the Security button (**6**) will display the next speed you may chose. The Standard Setting speeds range from 4.0 mph to 12.5 mph in increments of 0.5 mph.

Once your preferred speed is displayed, press the Information Display button (\*\*) again to save the Standard Setting speed. The InfoKey controller should now show the display at right.

The display will alternate between the current shutdown-timeout setting, and this display.

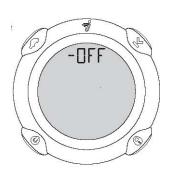

SP 112...

## **Setting Shutdown Timeout**

Shutdown Timeout is the period of time the Segway PT will remain powered-on in stand-by mode. For more information on stand-by mode please consult your Reference Manual. Pressing the Security button (6) will cycle through the available shutdown timeouts:

- 4 Seconds
- 30 Seconds
- 1 Minute
- 5 Minutes
- 15 Minutes

Pressing the Information Display button ( $\stackrel{\checkmark}{\simeq}$ ) will save your timeout interval setting and return the InfoKey controller to normal operation. All of your selection will be available for the Segway PT the next time you power-on.

## **Releasing Factory Turtle**

Turn InfoKey on and press the Information Display button ( $\stackrel{\checkmark}{\longrightarrow}$ ) until the 4-digit display shows. Press and hold the Information Display button ( $\stackrel{\checkmark}{\longrightarrow}$ ) and the Beginner button ( $\stackrel{\checkmark}{\longrightarrow}$ ) simultaneously for approximately 15 seconds until the 4 digits flash as asterisks. Release both buttons and then press the Beginner button ( $\stackrel{\checkmark}{\longrightarrow}$ ) again.